



- Torque wrench with interchangeable head.
- Suitable for the tightening of cable glands requiring a specific torque.
- Open end interchangeable head (spanner head) TWE series available separately.
- Spanner head is not included.

Product no. / Details

Product no.	Length	Torque range (N · m)	Increments (N · m)
TWH0.5-5	215	0.5 ~ 5.0	0.05



Notes

The torque wrench is not subject to RoHS regulations.

Since it is an OEM product and not a JIS-compliant product, no calibration services or inspection reports, etc. are provided.

When tightening, proceed first with a low value (half of the reference) of the recommended torque, and set the appropriate tightening torque for the cable and mounting part that will be tightened thereafter.

Please read the operation manual (refer to TAKACHI website) before use to ensure correct and safe usage of the product.

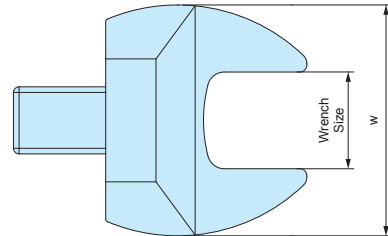

- Dedicated open end interchangeable head for TWH series.
- Various interchangeable heads are available to fit a range of cable gland sizes.

Product no. / Details

Product no.	Wrench size	w	t
TWE- 8	8	27	6
TWE- 9	9	27	6
TWE-11	11	27	6
TWE-12	12	30	6
TWE-13	13	31	6
TWE-15	15	40	9
TWE-16	16	40	9
TWE-17	17	41	9
TWE-18	18	42	9
TWE-19	19	42	10
TWE-21	21	47	10

Product no.	Wrench size	w	t
TWE-22	22	52	10
TWE-23	23	53	11
TWE-24	24	55	11
TWE-27	27	58	13
TWE-29	29	58	13
TWE-30	30	65	14
TWE-32	32	65	14
TWE-33	33	65	14
TWE-34	34	70	15
TWE-36	36	72	15

Note: These open end head is not subject to RoHS regulations.

Suitable TWE model

RM • RMW series


Product no.	Cap width	Suitable model	Lock nut width	Suitable model
RM8S-2.5	11.8	TWE-12	–	n/a
RM • RMW8L-2.5	11.8	TWE-12	12.6	TWE-13
RM8S-4	11.8	TWE-12	–	n/a
RM • RMW8L-4	11.8	TWE-12	12.6	TWE-13
RM • RMW10S-6	13	TWE-13	–	n/a
RM • RMW10L-6	13	TWE-13	14.8	TWE-15
RM • RMW12S-7	16	TWE-16	17	TWE-17
RM • RMW12L-7	16	TWE-16	17	TWE-17
RM • RMW16S-8	19	TWE-19	22	TWE-22
RM • RMW16L-8	19	TWE-19	22	TWE-22
RM • RMW20S-12	24	TWE-24	26.2	n/a
RM • RMW20L-12	24	TWE-24	26.2	n/a
RM • RMW25L-17	33	TWE-33	32.6	n/a
RM • RMW32L-21	36	TWE-36	40.3	n/a
RM • RMW40L-27	45.7	n/a	51	n/a
RM • RMW50L-38	60	n/a	61.2	n/a
RM63L-44	68	n/a	73.4	n/a

RPG series

Product no.	Cap width	Suitable model	Lock nut width	Suitable model
RPG7-7	16	TWE-16	18.7	TWE-19
RPG9-8	19	TWE-19	21.8	TWE-22
RPG11-10	22	TWE-22	23.7	TWE-24
RPG13.5-11	24	TWE-24	27	TWE-27
RPG16-14	26.7	TWE-27	29.8	TWE-30
RPG21-18	33	n/a	35.8	TWE-36
RPG29-25	42	n/a	45.8	n/a

RSP series

Product no.	Cap width	Suitable model	Lock nut width	Suitable model
RSP12-6	16	TWE-16	17	TWE-17
RSP16-8	19.5	n/a	22	TWE-22
RSP20-11	24	TWE-24	26.2	n/a
RSP25-16	33	TWE-33	32.6	n/a

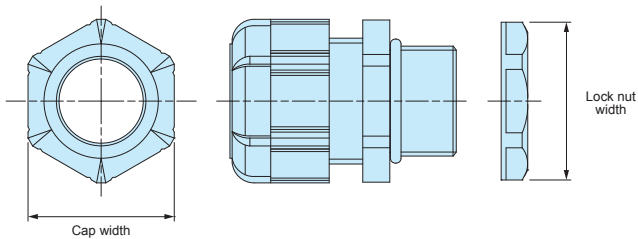

Note 1) ""n/a"" indicates no suitable spanner head size and torque value available.
 Note 2) Dimensions of Cap and Lock nut width are in mm.

AG series

Product no.	Cap width	Suitable model	Lock nut width	Suitable model
AG8-3.5	12	TWE-12	–	n/a
AG8-5	12	TWE-12	–	n/a
AG10-6	15	TWE-15	–	n/a
AG12-5	17	TWE-17	17	TWE-17
AG12-6.5	17	TWE-17	17	TWE-17
AG12-8	17	TWE-17	17	TWE-17
AG16-10	21	TWE-21	22	TWE-22
AG20-15	27	TWE-27	27	TWE-27
AG25-16	34	TWE-34	33	TWE-33
AG25-20	34	TWE-34	33	TWE-33
AG32-25.5	41	n/a	42	n/a
AG40-28.5	50	n/a	48	n/a
AG40-33	50	n/a	48	n/a
AG50-37	60	n/a	59	n/a
AG50-42	60	n/a	59	n/a

AGM series

Product no.	Cap width	Suitable model	Lock nut width	Suitable model
AGM6-2.5	8	TWE-8	9	TWE- 9
AGM6-3	8	TWE-8	9	TWE- 9
AGM6-3.5	8	TWE-8	9	TWE- 9
AGM8-5	11	TWE-11	11	TWE-11
AGM10-6	13	TWE-13	13	TWE-13
AGM12-8	15	TWE-15	15	TWE-15
AGM16-10.5	18	TWE-18	19	TWE-19
AGM20-15	24	TWE-24	24	TWE-24
AGM25-20	30	TWE-30	30	TWE-30
AGM32-25.5	36	TWE-36	36	TWE-36
AGM40-28.5	46	n/a	51	n/a
AGM40-33	46	n/a	51	n/a
AGM50-37	55	n/a	60	n/a
AGM50-42	55	n/a	60	n/a

AGE series

Product no.	Cap width	Suitable model	Lock nut width	Suitable model
AGE12-5	15	TWE-15	15	TWE-15
AGE12-6.5	15	TWE-15	15	TWE-15
AGE16-10.5	18	TWE-18	19	TWE-19
AGE20-15	24	TWE-24	24	TWE-24
AGE25-20	30	TWE-30	30	TWE-30
AGE32-25	36	n/a	36	n/a

AGH series

Product no.	Cap width	Suitable model	Lock nut width	Suitable model
AGH10-6	13	TWE-13	13	TWE-13
AGH12-8	15	TWE-15	15	TWE-15
AGH16-10.5	18	TWE-18	19	TWE-19
AGH20-15	24	TWE-24	24	TWE-24
AGH25-20	30	TWE-30	30	TWE-30
AGH32-25.5	36	TWE-36	36	TWE-36

TWH0.5-5 Torque Wrench Operation Manual

1 For Safety Use

Safety Precautions

Please read this manual carefully before use while following operation instructions. The manufacturer / retailer etc. will not be are not liable for any personal injuries, damage to the product, or other property damage, etc. caused by improper use.

Warnings




- Do not use beyond the maximum torque value. This may cause damage and injury.
- Do not use the torque wrench as a hammer or lever, or applying strong impact.
- Do not modify or disassemble the torque wrench. These may cause strength or accuracy problems, which may lead to accidents and injuries.
- Before use, check for damage, cracks, rust, or deformation. These may cause damage and injury.
- Do not use the torque wrench to loosen nuts or caps as it is a precision instrument.
- Do not operate the torque wrench with oily or greasy hands. This may cause your hands to slip while tightening, leading to accidents or injuries.
- Wear safety glasses or other eye protection while using.
- Be careful not to hit your hands or elbows on surrounding objects when working with a torque wrench.
- Do not use the torque wrench underwater or in the sea.
- When working on elevated platforms, take measures to prevent torque wrenches from falling.

Cautions





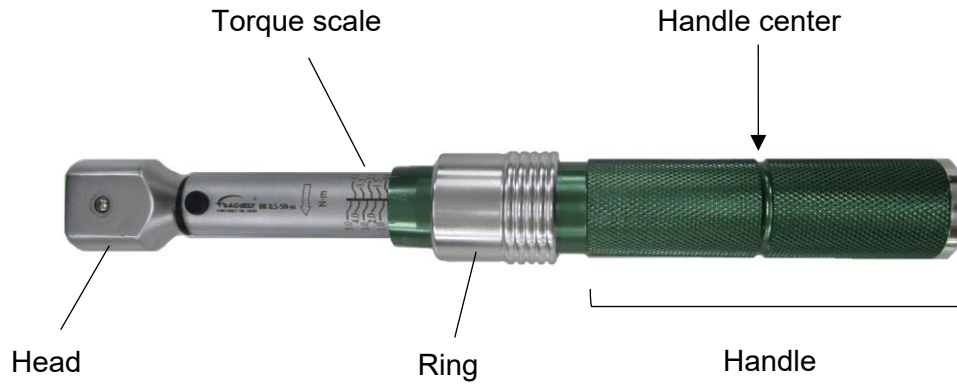

- Set the torque before each use.
- Do not lower the scale below the minimum.
- Do not use it outside of the torque scale range.
- Every time before setting the torque, ensure that the handle lock is in the unlock position first before rotating the handle.
- Grip the center of the handle to tighten. Gripping the edge of the handle may cause incorrect torque value.
- Tighten slowly while applying minimal force. Otherwise applied torque value may be incorrect.
- Stop tightening after hearing, or feeling a clicking sound or sensation. Further tightening may result in overtorque.
- Do not use parts such as a pipe to extend the handle.
- Do not drop the torque wrench or apply strong impact.
- Do not use in high temperature and humid environments.
- After use, set the torque wrench to the minimum value.
- After use, remove dirt, dust, mud, oil, water, etc. before storing.
- Store in a dry place when not in use for an extended period of time.

2 Components



3 How to use

① Push and hold the ring down to unlock.	② Turn the handle.
 <p>A blue arrow points downwards towards the silver ring on the torque wrench shaft.</p>	 <p>· Turn the handle while the ring is in the unlock position.</p> <p>Blue curved arrows indicate the handle is being rotated.</p>
③ Adjust to required torque.	④ Release the ring.
 <p>A red arrow points to the green ring on the torque scale, which is aligned with the 1.0 N·m mark.</p>	 <p>· The ring will spring back to its original (lock) position.</p> <p>A blue arrow points upwards towards the silver ring.</p>

TAKACHI ELECTRONICS ENCLOSURE CO., LTD.

TEL. +81-48-222-5409

<https://www.takachi-enclosure.com/>

2023.10